

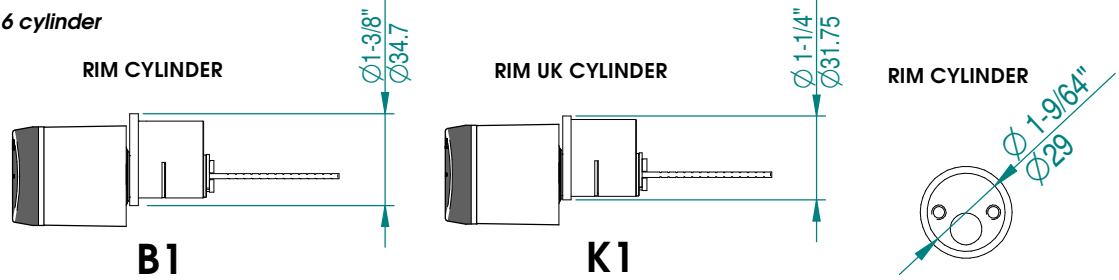
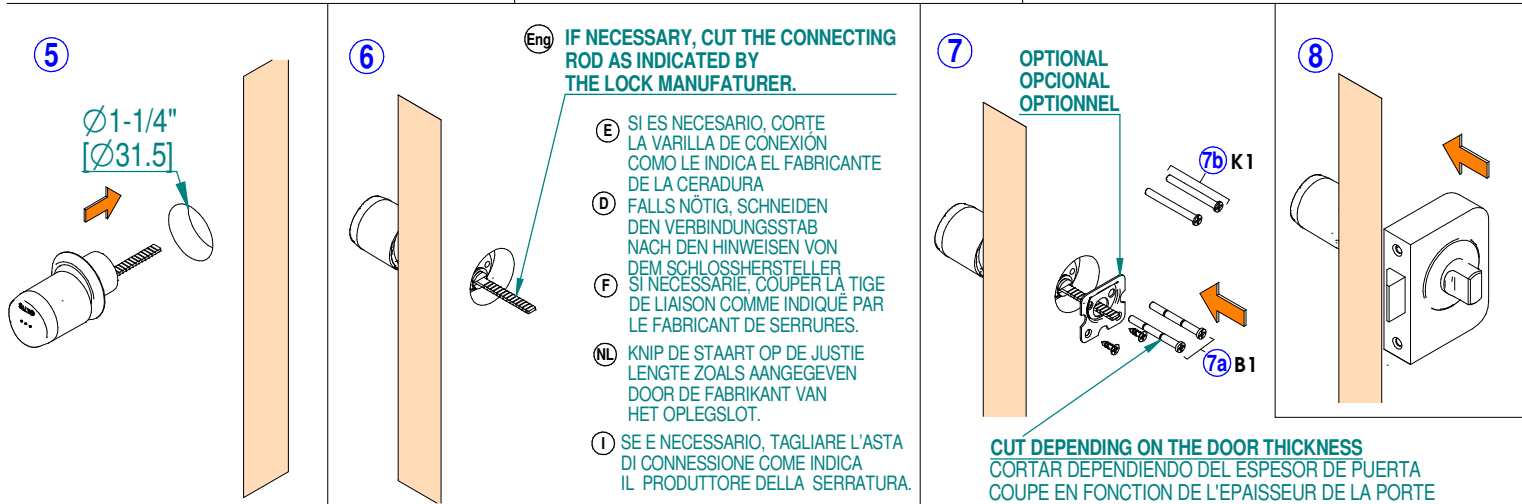


Durability EN 1303 Class 6 cylinder

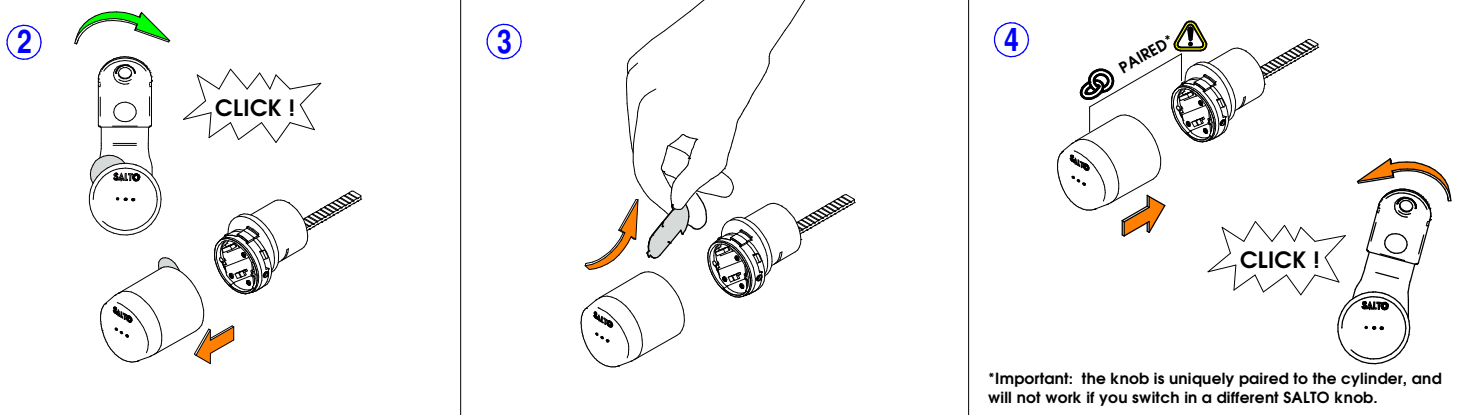

(Eng) Installation (E) Instalacion (D) Montage (F) Installation (NL) Handleidig (I) Montaggio

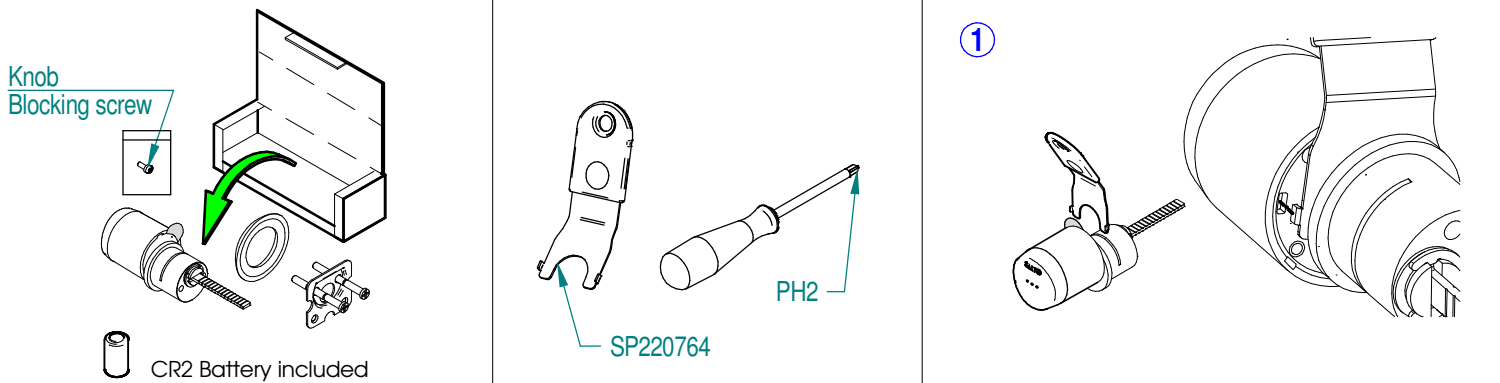

1 **PRIMA DI CHIUDERE LA PORTA, PROGRAMARE IL CILINDRO**

F **NE FERMEZ PAS LA PORTE. PROGREMEZ LE CYLINDRE AVANT**

E **EN ESTE PUNTO NO CIERRE LA PUERTA, PROGRAME PRIMERO EL CILINDRO**
Consulte el manual del usuario


(Eng) **AT THIS POINT DO NOT CLOSE THE DOOR PROGRAM THE CYLINDER FIRST**
follow user manual



(NL) **SLUIT DE DEUR NOG NIET! PROGRAMEER EN TEST DE CILINDER OP EEN CORRECTE WERKIN**

D **TÜRE NICHT SCHLIESSEN. ZUERST SCHLOSS PROGRAMMIEREN**

Eng Battery change E Sustitución de la pila D Batterie tauchen F Remplacer la pile NL Vervangen batterij I Sostituzione la pila

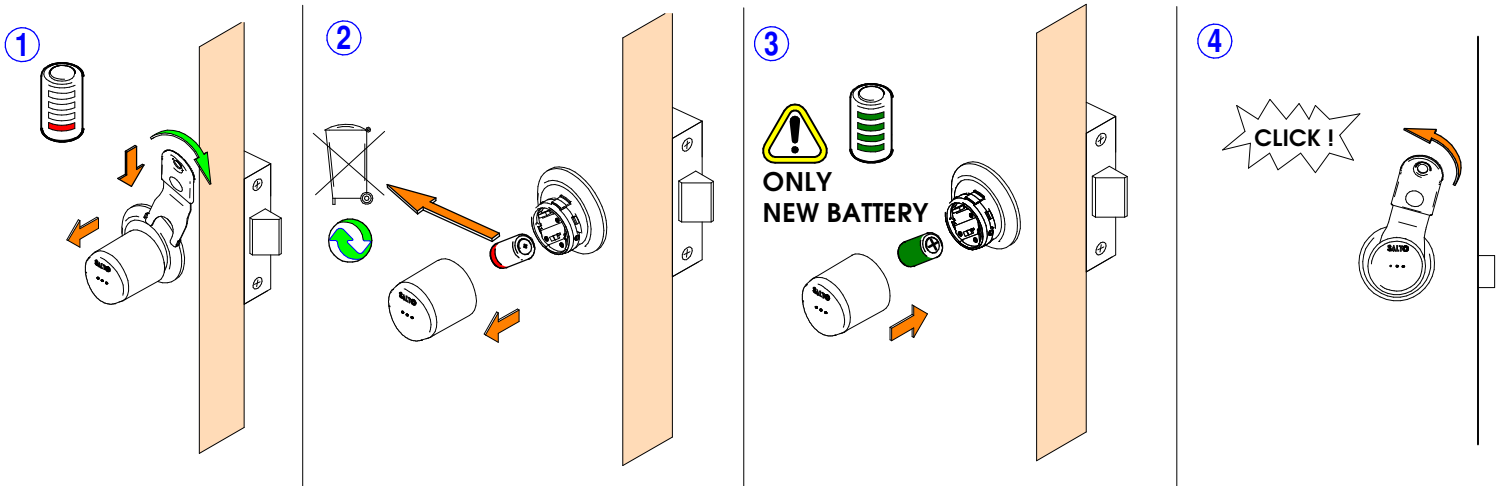


Eng Installation and use recommendations E Consejos instalación y uso D Empfohlene Handhabung und Installation F Recommendations d'utilisation et d'installation NL Aanbevelingen van de gebruik en installatie I Raccomandazioni d'uso ed d'utilizzo



Outer knob
Pomo exterior
Außenknäuf
Bouton extérieure
Buitenknop
Manopola esterna

 0 - 3 mm Max.




Burglar Resistant door plate


Door
Puerta
Tür
Porte
Deur
Porta



3,5 Nm Max

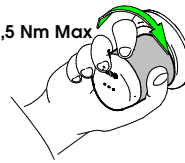

NO OK

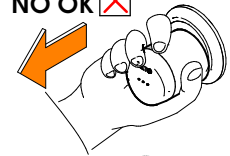

OK

