


Installation guide Ei6xx...

- Ⓔ Installation guide
- Ⓔ Guía de instalación
- Ⓔ Montageanleitung
- Ⓔ Guide d'installation
- Ⓔ Guida all'installazione

- Ei 650 m 00 ff t x h r series
- Ei 651 m dd ff t x h r
- Ei 652 m dd ff t x h r
- Ei 653 m dd ff t x h r
- Ei 654 m dd ff t x h r
- Ei 656 m 00 ff t x h r
- Ei 657 m dd ff t x h r
- Ei 658 m 00 ff t x h r
- Ei 660 m 00 ff t x h r
- Ei 6E0 m dd ff t x h r
- Ei 6P0 m 00 ff t x h r
- Ei 661 m dd ff t x h r
- Ei 6E1 m dd ff t x h r
- Ei 6P1 m dd ff t x h r
- Ei 666 m 00 ff t x h r
- Ei 6E6 m 00 ff t x h r
- Ei 6P6 m 00 ff t x h r
- Ei 668 m dd ff t x h r



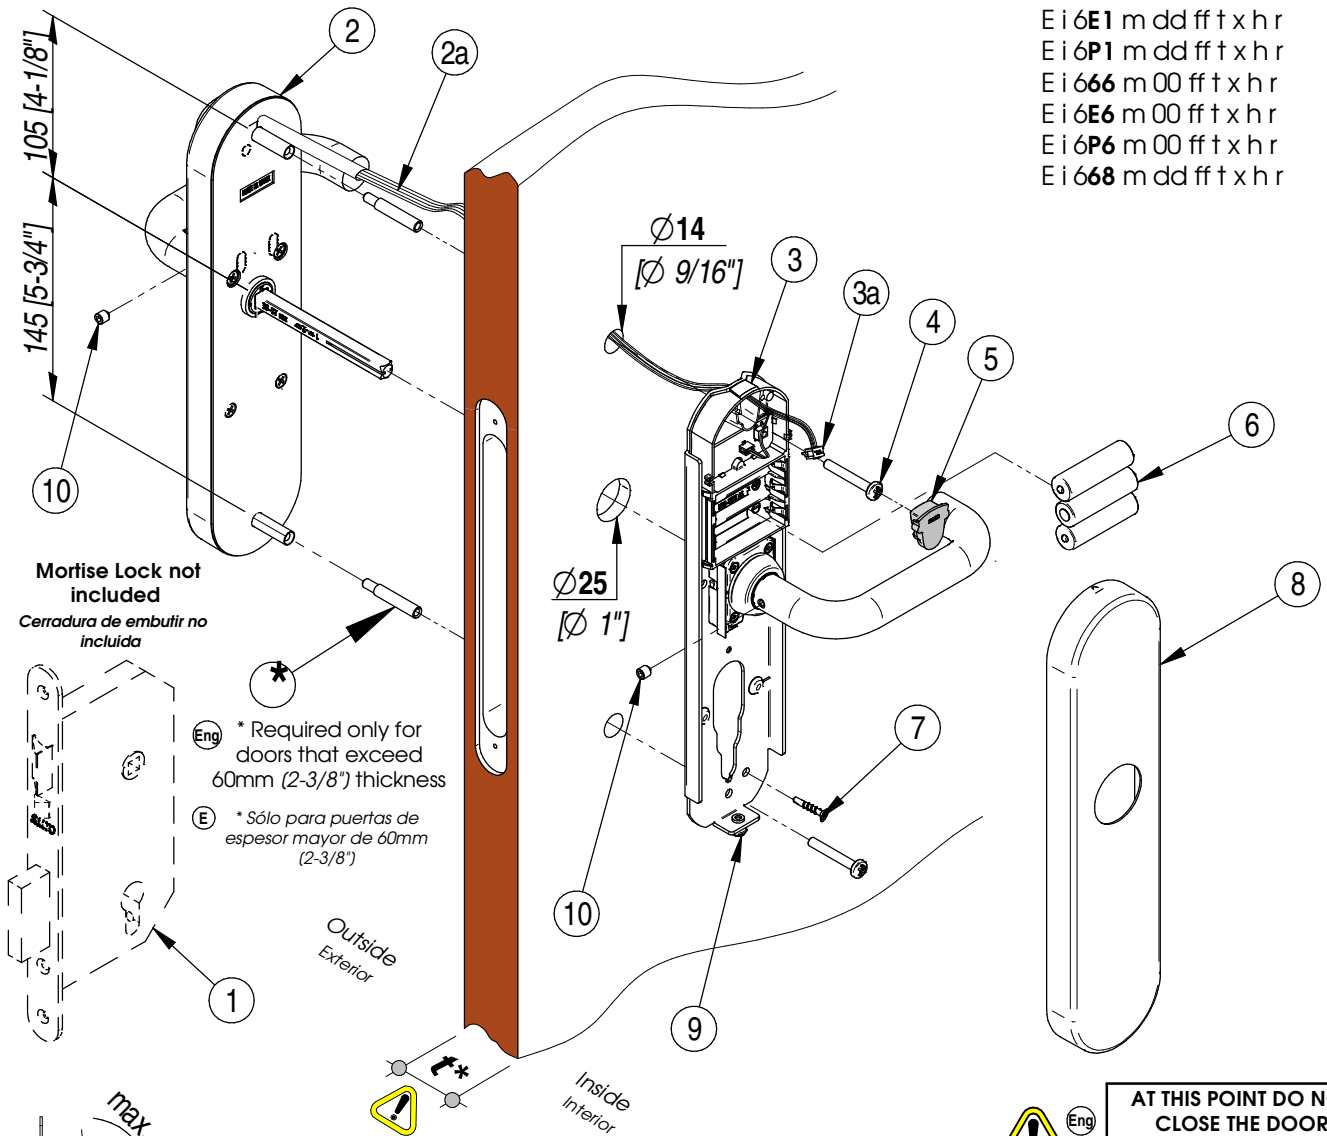


Mortise Lock not included
Cerradura de embutir no incluida

- Ⓔ * Required only for doors that exceed 60mm (2-3/8") thickness
- Ⓔ * Sólo para puertas de espesor mayor de 60mm (2-3/8")

Ⓔ SALTO recommends the use of a mortise lock, with a maximum 4° pre-turn
Ⓔ SALTO no garantiza el correcto funcionamiento del ensamble, si se utilizan cerraduras con pregiro superior a 4°


Ⓔ **AT THIS POINT DO NOT CLOSE THE DOOR PROGRAM THE LOCK FIRST**
follow user manual
Ⓔ **EN ESTE PUNTO NO CIERRE LA PUERTA, PROGRAME PRIMERO LA CERRADURA**
Consulte el manual del usuario







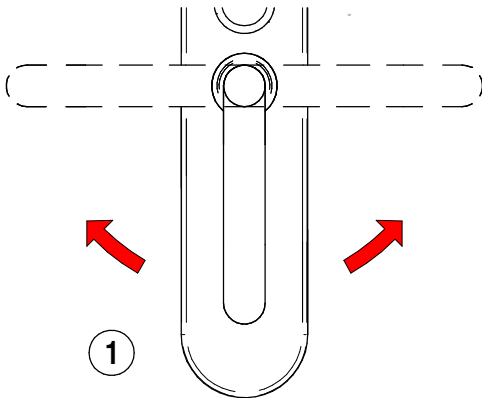
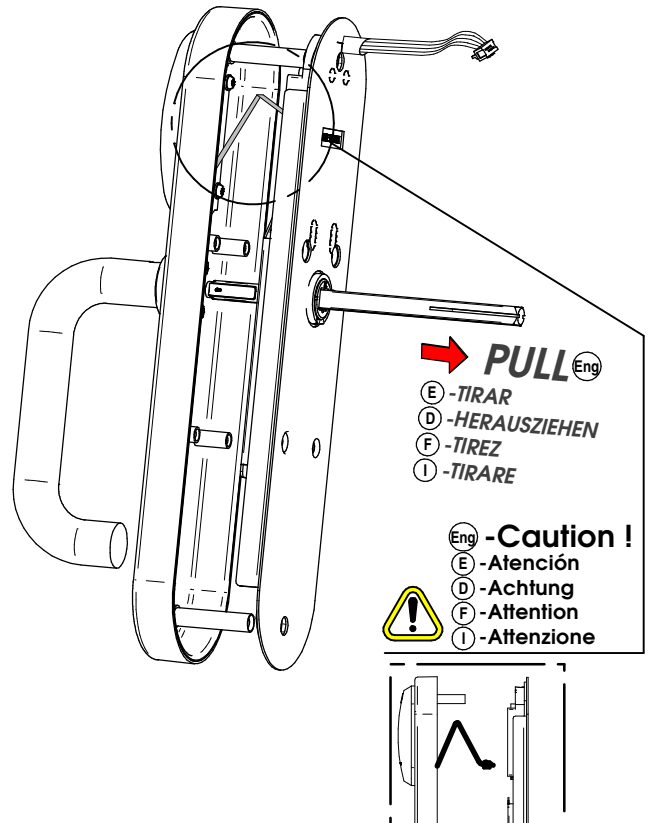
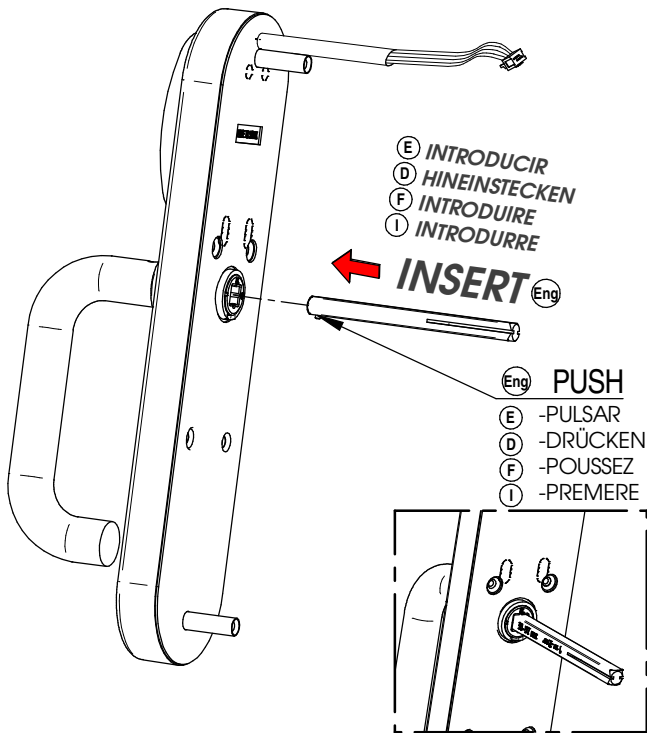


Eng SELECT HANDING

- (E) -SELECCIONE MANO
- (D) -DRÜCKERRICHTUNG WÄHLEN
- (F) -CHOISIR LE SENSE DE LE POIGNÉ
- (I) -SELEZIONARE MANO

- Eng -Do not disconnect !**
- (E) -No desconectar
 - (D) -Verbindung nicht unterbrechen
 - (F) -Ne pas déconnecter
 - (I) -No scollegare

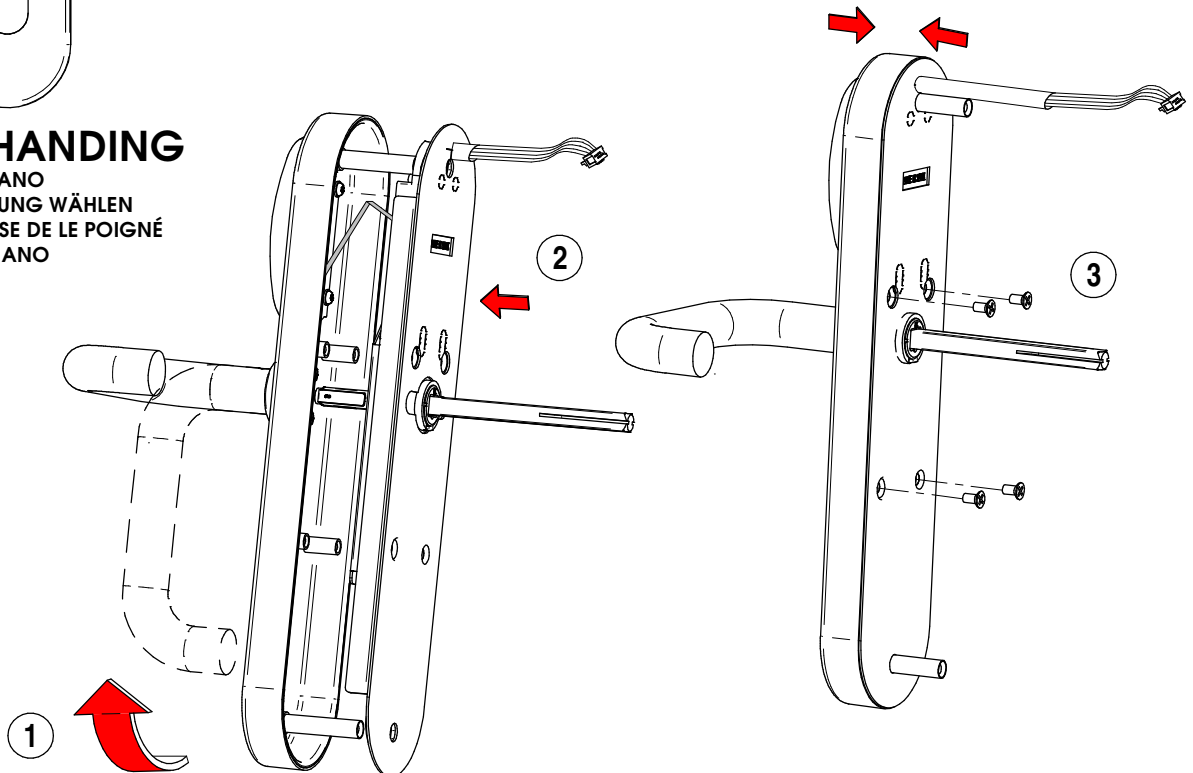

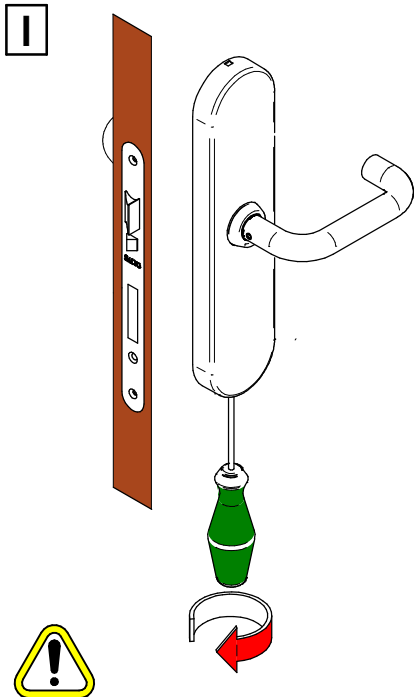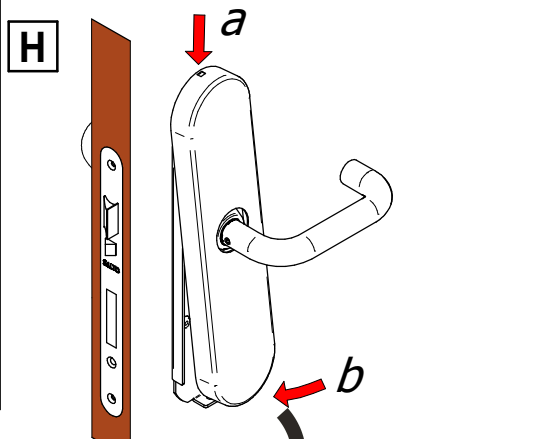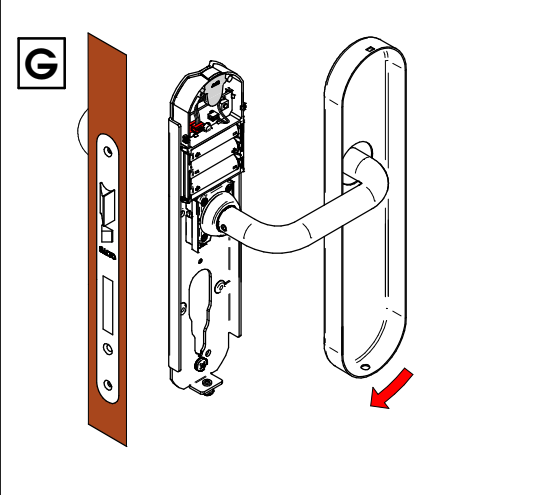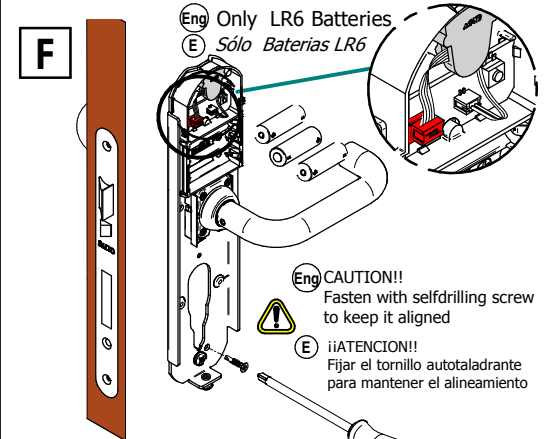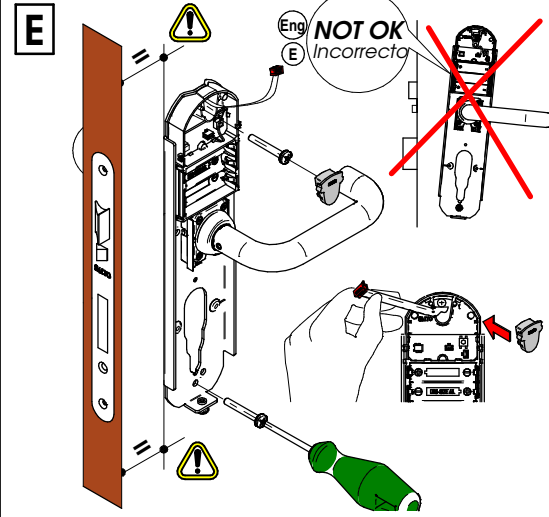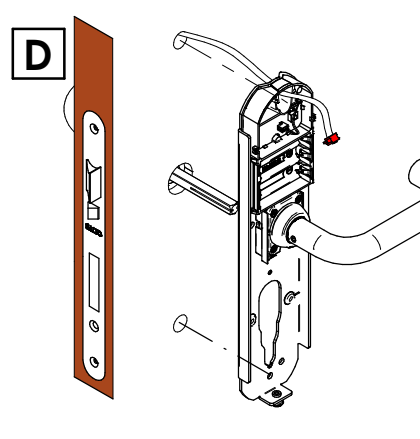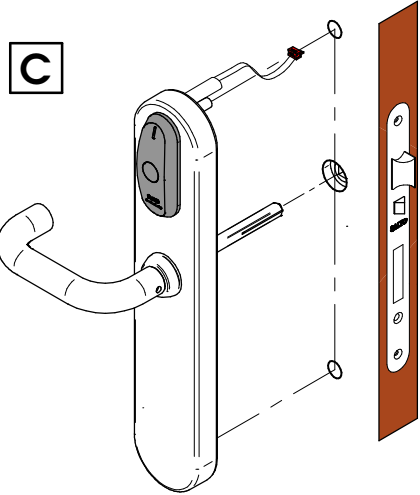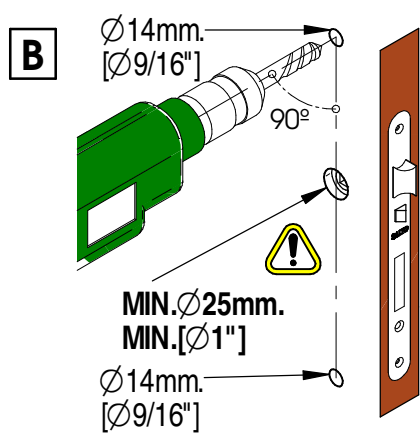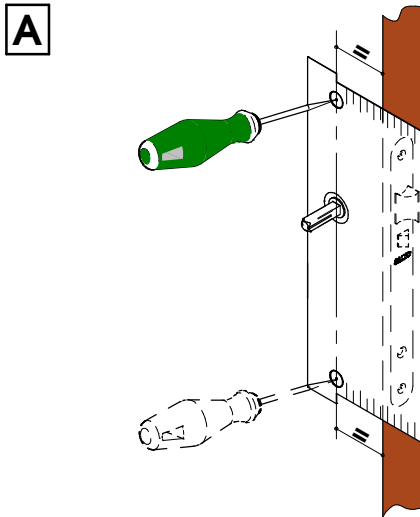

Reverse !


Eng -TO FIX COUNTER-CLOCKWISE

E -FIJACION: GIRAR SENTIDO ANTIHORARIO

D -GEGEN UHRZEIGERSINN FESTSCHRAUBEN

F -POUR FIXER, TOURNEZ EN SENS INVERSE DES AIGUILLES D'UNE MONTRE

I -FISSAGGIO: GIRARE SENSO ANTIORARIO

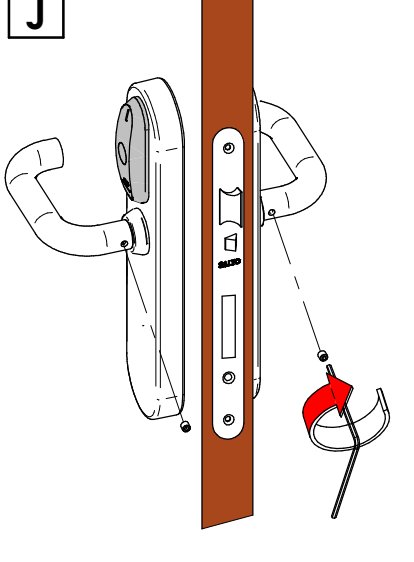

Eng **AT THIS POINT DO NOT CLOSE THE DOOR PROGRAM THE LOCK FIRST**

E NO CIERRE LA PUERTA. programe la cerradura

D TÜRE NICHT SCHLIESSEN. ZUERST SCHLOSS PROGRAMMIEREN

F NE FERMEZ PAS LA PORTE. PROGRAMMEZ LA BÉQUILLE AVANT


I PRIMA DI CHIUDERE LA PORTA, PROGRAMARE LA SERRATURA

Eng follow user manual

E Consulte el manual del usuario


Installation guide Ei6xx...

Ei651 m dd ff t s h
Ei661 m dd ff t s h

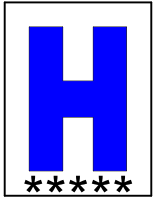


Eng HOTEL GUEST ROOM LOCK

- E** HABITACION HOTEL
- D** HOTELZIMMERSCHLOSS
- F** PIÈCE D'HÔTEL
- I** CAMERE HOTEL

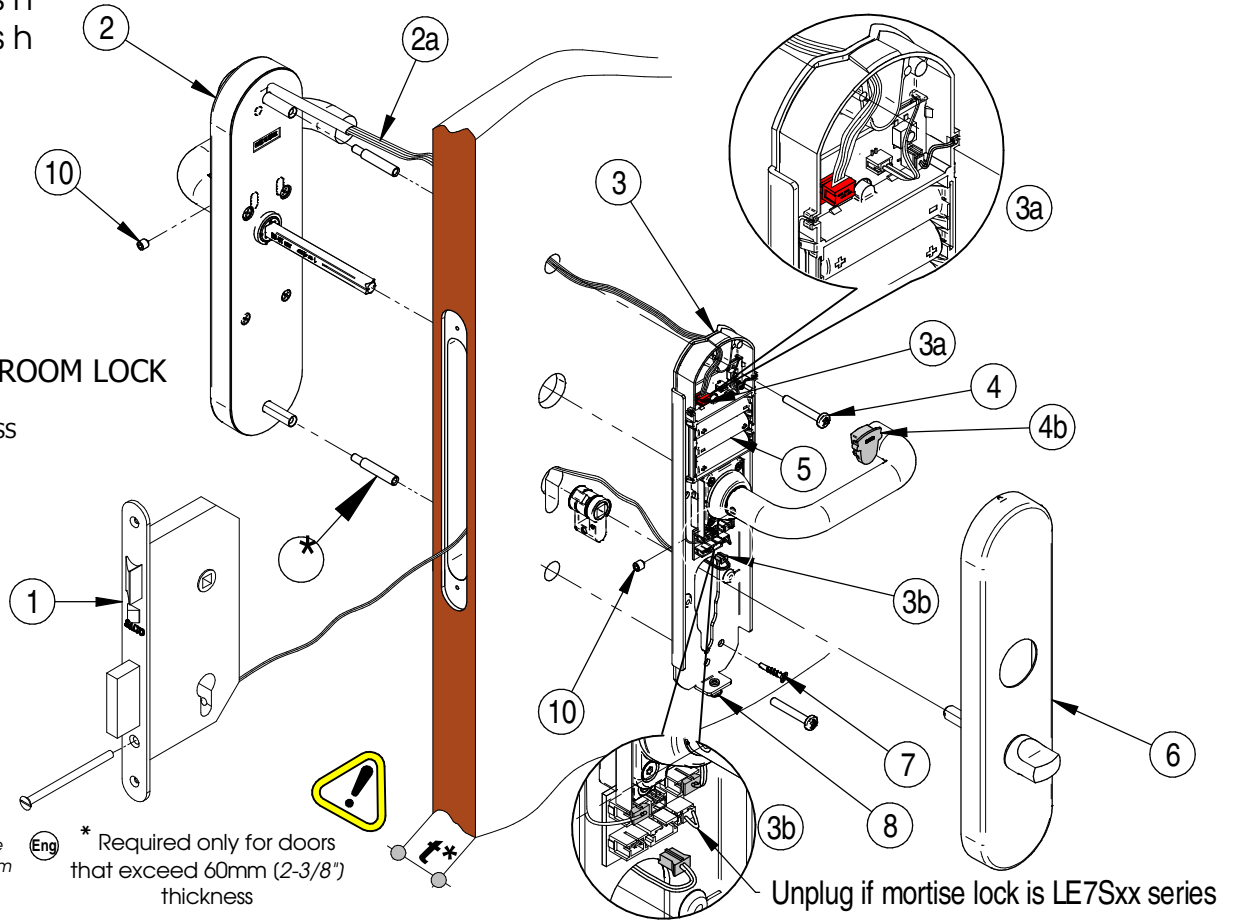

WIRELESS with external door detector

Ei6xx m 00 ff t x h W series

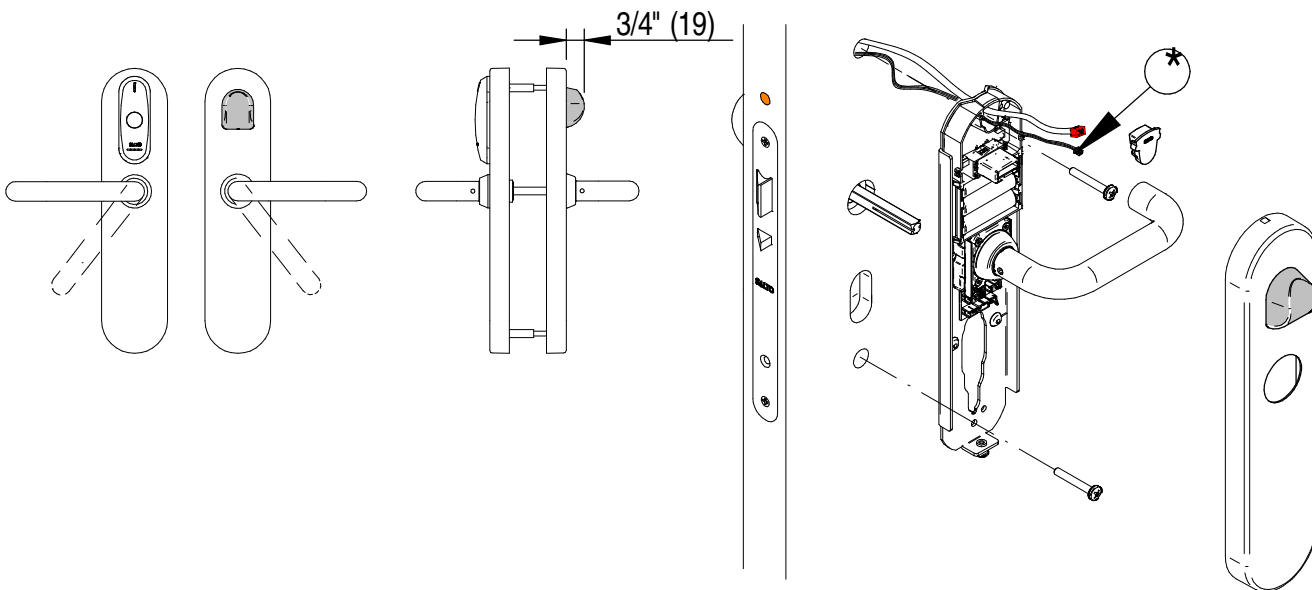

Eng * Door detector for Ai6xx...
Wooden doors **RFDICTW18W01**
Steel doors **RFDICTS18W01**
See installation instruction 220446 or 220449

E * Detector de puerta para Ai6xx...
Puertas de madera **RFDICTW18W01**
Puertas metálicas **RFDICTS18W01**
Ver hoja de instalación 220446 ó 220449