

(Eng) Installation guide Electronic RIM Cylinder

(E) Guía de instalación Cilindro RIM electrónico

(D) Montageanleitung Elektronik RIM Zylinder

(F) Guide d'installation Cylindre RIM électronique


(NL) Handleiding Elektronische cilinder

(I) Guida all'installazione Cilindro elettronico




G x B1 1x... series

G x K1 1x...

Durability EN 15684 Class 6 cylinder

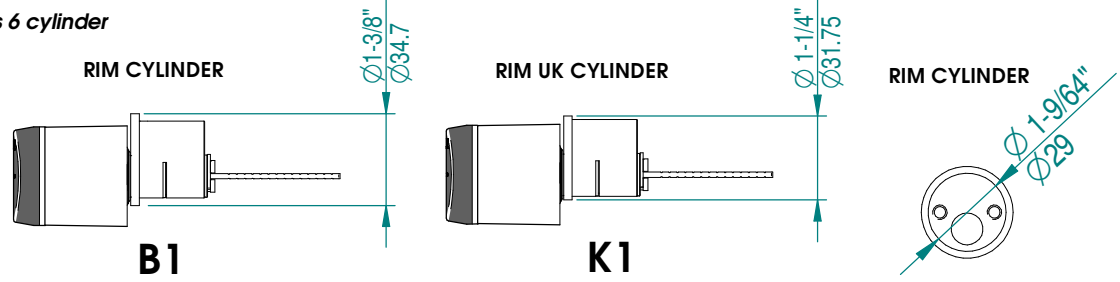

(Eng) Installation (E) Instalacion (D) Montage (F) Installation (NL) Handleidig (I) Montaggio

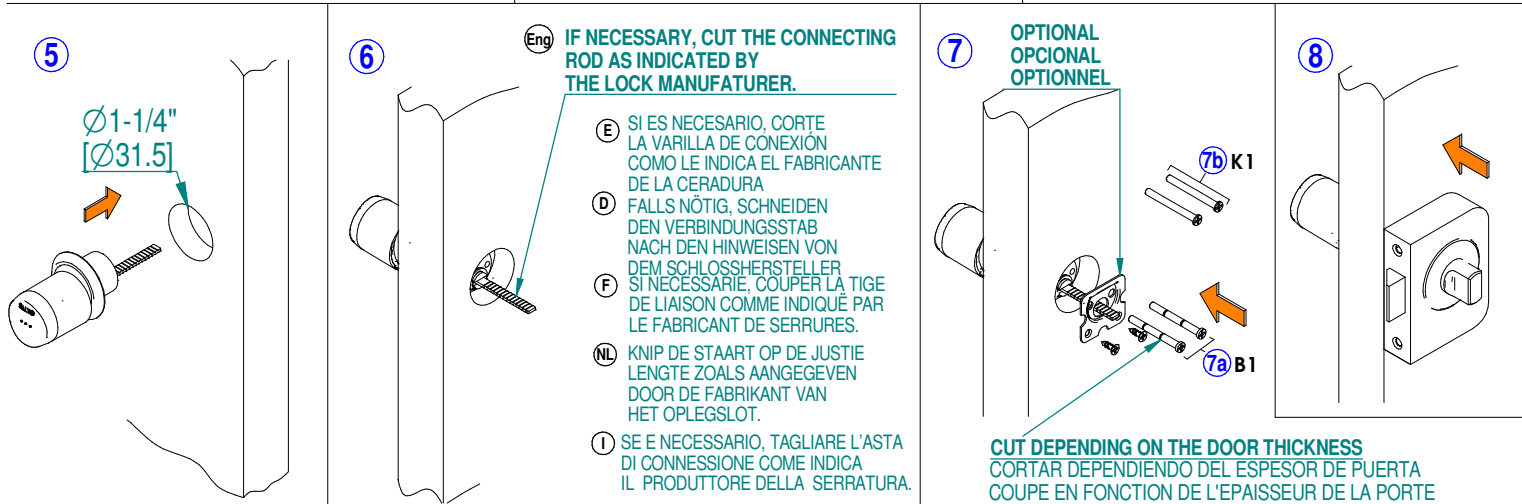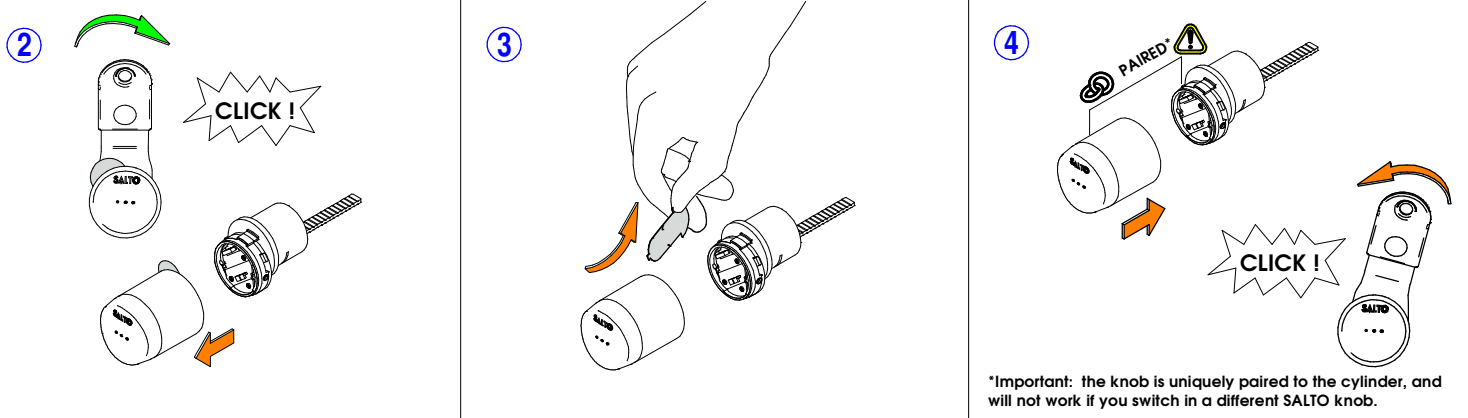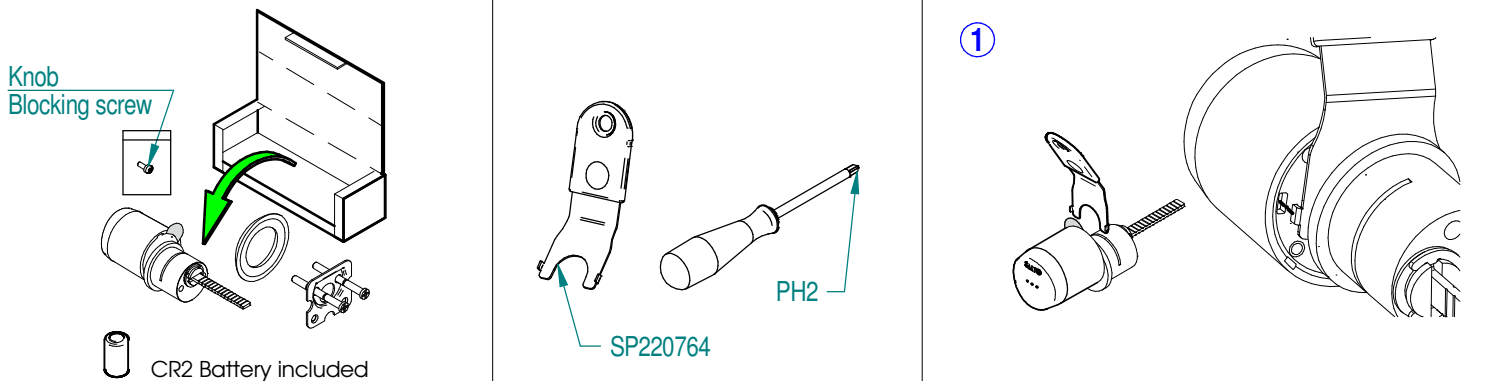

(I) PRIMA DI CHIUDERE LA PORTA, PROGRAMARE IL CILINDRO

(F) NE FERMEZ PAS LA PORTE. PROGREMEZ LE CYLINDRE AVANT

(E) EN ESTE PUNTO NO CIERRE LA PUERTA, PROGRAME PRIMERO EL CILINDRO
Consulte el manual del usuario


(Eng) AT THIS POINT DO NOT CLOSE THE DOOR PROGRAM THE CYLINDER FIRST
follow user manual



(NL) SLUIT DE DEUR NOG NIET! PROGRAMEER EN TEST DE CILINDER OP EEN CORRECTE WERKIN

(D) TÜRE NICHT SCHLIESSEN. ZUERST SCHLOSS PROGRAMMIEREN


Eng Battery change **E Sustitución de la pila** **D Batterie tauchen** **F Remplacer la pile** **NL Vervangen batterij** **I Sostituzione la pila**

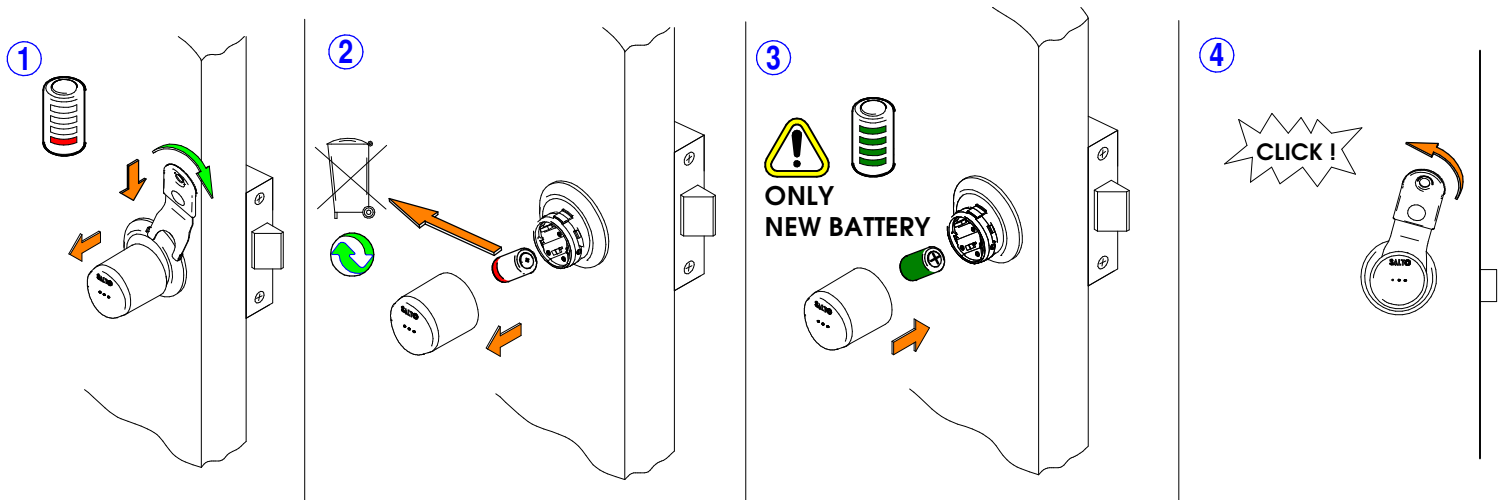

Eng Installation and use recommendations **E Consejos instalación y uso** **D Empfohlene Handhabung und Installation**
F Recommendations d'utilisation et d'installation **NL Aanbevelingen van de gebruik en installatie**
I Raccomandazioni d'uso ed d'utilizzo



Outer knob
Pomo exterior
Außenknopf
Bouton extérieure
Buitenknop
Manopola esterna

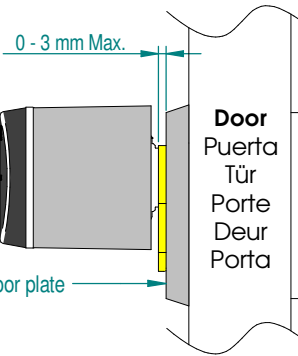

Door
Puerta
Tür
Porte
Deur
Porta

Burglar Resistant door plate



3,5 Nm Max



NO OK

