
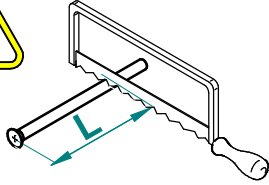


Installation guide
SR21 Cylinder security rose

SALTO
inspiredaccess

DIN
TYPE

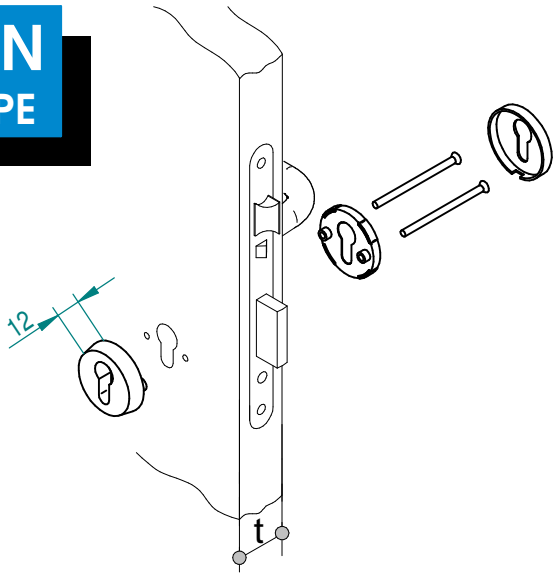

L = t + 17

© 2017 SALTO Systems S.L.

SALTO Geo



225591-ED.- 19/09/2017

All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.

Installation guide
SR21 Cylinder security rose

SALTO
inspiredaccess

DIN
TYPE

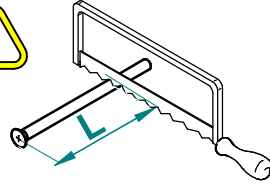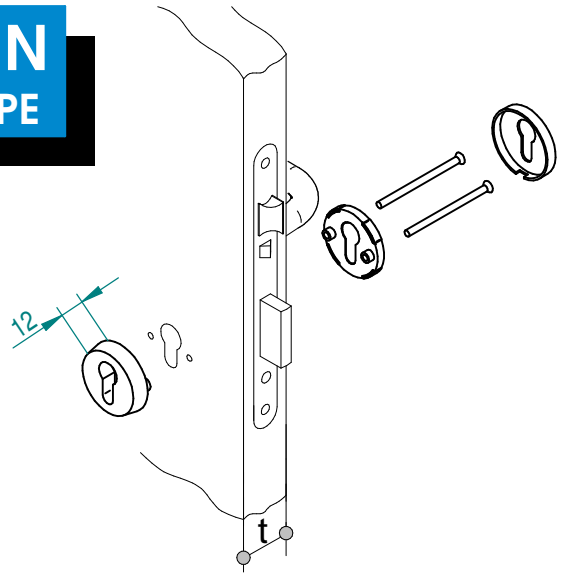

L = t + 17

© 2017 SALTO Systems S.L.

SALTO Geo



225591-ED.- 19/09/2017

All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.

Installation guide
SR21 Cylinder security rose

SALTO
inspiredaccess

DIN
TYPE

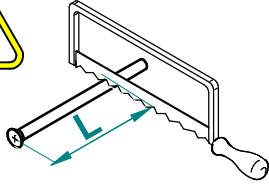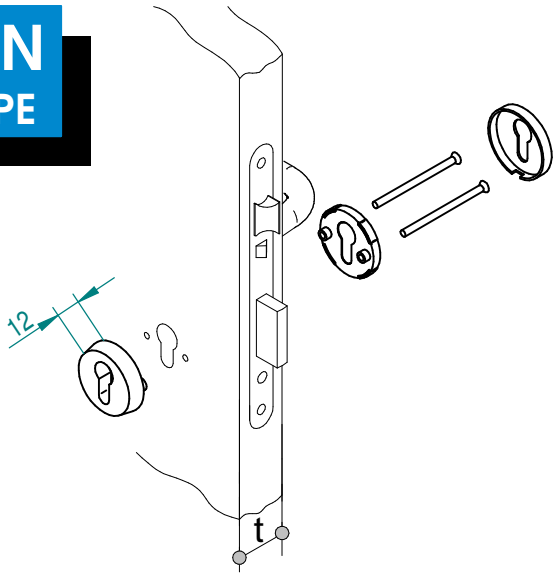

L = t + 17

© 2017 SALTO Systems S.L.

SALTO Geo



225591-ED.- 19/09/2017

All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.

Installation guide
SR21 Cylinder security rose

SALTO
inspiredaccess

DIN
TYPE

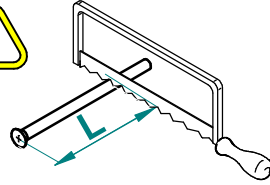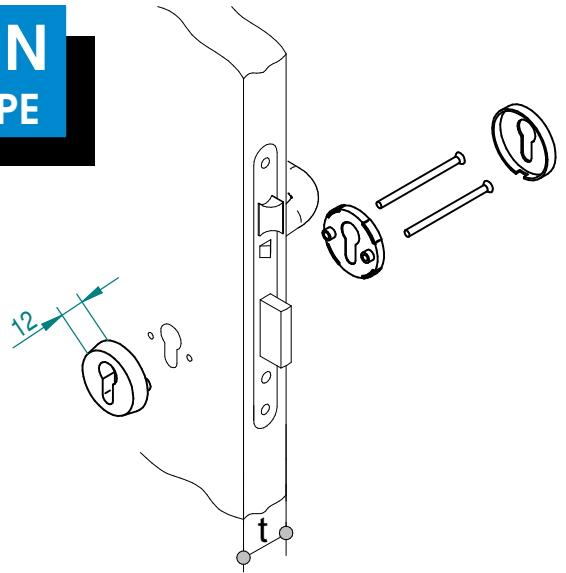

L = t + 17

© 2017 SALTO Systems S.L.

SALTO Geo

225591-ED.- 19/09/2017

All contents current at time of publication. SALTO Systems S.L. reserves the right to change availability of any item in this catalog, its design, construction, and/or materials.