

Firmware versions

-December 2020-



Name	Description	Dev. No.	Firm.	Lastest
			No.	Vers.
Control Units	CU5000 Ethernet Board	0341	1	01.53
Control Units	CU5000 Ethernet-SVN board	0342	2	01.52
Control Units	Control Unit 1 door, 2 readers, 2 relais	0340	3	02.24
Lock Readers	Smart Card Reader EU	0060	4	02.62
Wall Readers	SMART CARD WRM	0560	4	02.62
Encoders	SMART CARD ENCODER	0460	5	01.41
Encoders	MIFARE ENCODER	0490	6	05.05
Wall Readers	MIFARE WR	0590	7	04.19
Wall Readers	MIFARE WRM	0590	7	05.04
Lock Readers	Mifare Reader EU	0090	8	05.07
Lock Readers	Mifare Reader XS4	0090	8	05.07
Lock Readers	Mifare Reader XS4 SALLIS	0090	8	05.01
Lock Readers	Mifare Reader XS4 CLAY	0090	8	04.10
ESD	SMART ENERGY SAVING DEVICE	0760	9	01.11
ESD	MIFARE ENERGY SAVING DEVICE	0790	10	02.45
Encoders	PICOPASS ENCODER	0481	11	02.45
Wall Readers	PICOPASS WRM	0581	12	02.46
Lock Readers	Picopass Reader EU	0081	13	02.49
Lock Readers	Picopass Reader XS4	0081	13	02.49
Lock Readers	Memory Card Reader EU	0050	14	02.23
Wall Readers	SMART CARD WRM	0550	14	02.23
Lock Controls	Smart/Prox RW Control Double Comfort	0133	15	02.07
Lock Controls	Proximity RW RFIEEE Control XS4	0132	16	01.47
Encoders	HIDiCLASS ENCODER	0482	17	02.45
Wall Readers	HIDiCLASS WRM	0582	18	02.46
Lock Readers	HIDiClass Reader EU	0082	19	02.49
Lock Readers	HIDiClass Reader XS4	0082	19	02.49
eCylinder Controls	IBUTTON RW CONTROL ECYLINDER	0122	20	01.05
eCylinder Controls	IBUTTON ROM CONTROL ECYLINDER	0123	21	01.01
eCylinder Controls	IBUTTON SMILE CONTROL ECYLINDER	0127	22	01.03
Lock Controls	Dallas RW Control XS4	0125	23	03.03
Lock Controls	Dallas ROM Control XS4	0126	24	01.22
Lock Controls	Dallas Smile Control XS4	0128	25	01.03
Lock Readers	HIDiClass Reader EU (Chipset HID)	0082	26	02.55
Lock Readers	HIDiClass Reader XS4 (Chipset HID)	0082	26	02.55
Wall Readers	HIDiCLASS WRM (Chipset HID)	0582	27	02.46
eCylinder Readers	MIFARE PROXIMITY READER ECYLINDER	0090	28	03.15
eCylinder Readers	PICOPASS PROXIMITY READER ECYLINDER	0081	29	02.49
eCylinder Readers	eCylinder HIDiClass Reader eCylinder	0082	30	02.49
eCylinder Controls	PROXIMITY RW CRTL eCYLINDER	0129	31	02.00
Wall Readers	Slim Wall Reader Mifare	0590	32	05.04
Wall Readers	Slim Wall Reader Picopass	0581	33	02.48
Wall Readers	Slim Wall Reader HIDiClass	0582	34	02.48
Wall Reader	Slim Wall Reader HIDiClass (HID chipset)	0582	35	02.48
eCylinder Readers	eCylinder HIDiClass Reader (Chipset HID)	0082	36	02.48
Lock Controls	Proximity RW Control XS4	0135	37	04.13

RFIEEE	MODULO RF RFIEEE		38	04.11
RFIEEE	MODULO RF SALLIS		38	02.00
RFIEEE	MODULO RF GATEWAY		39	01.26
RFIEEE	MODULO RF REPETIDOR		40	01.26
Peripherals	PORTABLE PROGRAMMER PLUS	0200	41	01.49
RFIEEE	Device Under Test		42	01.12
RFIEEE	RF TESTER		43	01.12
Control Units	Updater RS485 (for Bosch)	0343	44	01.50
eCylinder Controls	IBUTTON SMILE CONTROL ECYLINDER DOBLE	0127	45	01.03
eCylinder Controls	IBUTTON ROM CONTROL ECYLINDER DOBLE	0123	46	01.01
eCylinder Controls	IBUTTON RW CONTROL ECYLINDER DOBLE	0122	47	01.05
eCylinder Controls	PROXIMITY RW CRTL eCYLINDER DOBLE	0137	48	02.00
eCylinder Controls	PROXIMITY RW CRTL eCYLINDER MEDIO	0136	49	02.00
GEO Cylinder	MIFARE CONTROL GEO CYLINDER	0140	51	01.12
Control Units	Updater para el Ubox Kit	0344	52	02.20
Lock Controls	AELEMENT Mifare RFIEEE	0138	53	01.41
Locker Locks	Mini Locker MIFARE	0139	54	02.06
GEO Cylinder	iBUTTON CONTROL GEO CYLINDER	0142	58	01.12
RFIEEE	ROUTER SALLIS 485	0801	59	01.21
RFIEEE	NODO RF SALLIS		60	02.00
Lock Controls	Proximity RW SALLIS Control XS4	0141	61	02.03
Lock Controls	AELEMENT Mifare SALLIS	0143	62	01.11
Lock Controls	Proximity RW AMOK Control XS4	0144	63	01.06
Lock Readers	HIDiClass Keypad Reader XS4	0083	64	01.01
RFIEEE	ROUTER SALLIS PoE	0802	72	01.22
Lock Readers	MIFARE Keypad Reader XS4	0091	73	04.15
RFIEEE	PLACA ETHERNET POE GATEWAY01		76	01.03
GEO Cylinder	LEGIC ADVANT CONTROL GEO REMOVABLE CYLINDER	0146	77	01.17
Encoders	LEGIC ADVANT ENCODER	0480	79	03.11
Wall Readers	LEGIC ADVANT WRM	0580	80	03.11
Wall Readers	Slim Wall Reader Legic Advant	0580	81	03.11
Lock Readers	Legic Advant Reader XS4	0080	82	03.11
Lock Readers	Legic Advant Reader XS4 SALLIS	0080	82	03.04
RFIEEE	PLACA ETHERNET POE GATEWAY02		83	02.08
Lock Readers	HIDiClass Keypad Reader XS4 (Chipset SIO)	0083	84	04.02
Encoders	HIDiCLASS ENCODER (Chipset SIO)	0482	85	05.02
Wall Readers	HIDiCLASS WRM (Chipset SIO)	0582	86	05.00
GEO Cylinder	MIFARE CONTROL GEO REMOVABLE CYLINDER	0140	87	01.18
RFIEEE	NODO RF2		88	02.00
RFIEEE	NODO RF2 MINI		89	02.00
GEO Cylinder	MIFARE CONTROL SALLIS GEO REMOVABLE CYLINDER	0147	90	01.16
GEO Cylinder	LEGIC ADVANT CONTROL SALLIS GEO REMOVABLE CYLINDER	0148	94	01.12
Lock Controls	Proximity RW CLAY Control XS4	0150	95	01.17
GEO Cylinder	MIFARE CONTROL CLAY GEO REMOVABLE CYLINDER	0151	96	01.11
GEO Cylinder	HID iCLASS CONTROL GEO CYLINDER	0171	97	01.03
RFIEEE	MODULO RF CLAY		99	01.01
Locker Locks	Mini Locker LEGIC ADVANT	0149	100	01.02
GEO Cylinder	MIFARE CONTROL GEO REMOVABLE VdS	0140	103	01.20
GEO Cylinder	LEGIC ADVANT CONTROL GEO REMOVABLE VdS	0146	104	01.19

Lock Readers	HIDiClass Reader XS4 (Chipset SIO)	0082	105	04.03
Lock Controls	AELEMENT MIFARE RFIEEE EV1	0138	106	02.10
GEO Cylinder	MIFARE CONTROL GEO REMOVABLE CYLINDER	0140	107	02.09
GEO Cylinder	MIFARE CONTROL GEO RFIEEE REMOVABLE CYLINDER	0190	108	01.09
Peripherals	PORTABLE PROGRAMMER PLUS CONTACTLESS	0200	109	02.20
Locker Locks	Mini Locker HID iCLASS	0170	110	01.01
Lock Readers	HIDiClass Reader XS4 (SIO) SALLIS	0082	111	04.03
GEO Cylinder	iButton CONTROL GEO CYLINDER VdS	0142	112	01.12
GEO Cylinder	HID iCLASS CONTROL SALLIS GEO CYLINDER	0152	113	01.03
Control Units	Mini CU series 4000 CLAY	0350	114	01.73
Lock Controls	XS4 Mini MIFARE Control	0160	116	01.73
Lock Readers	MIFARE Reader BLE XS4	0092	118	01.12
Control Units	CU42x0 CONTROL BOARD	0352	119	02.28
Control Units	CU42E0 GATEWAY BOARD	0351	120	01.16
Wall Readers	Slim Wall Reader HIDiClass SiO	0582	121	05.00
Wall Readers	CU42x0 Wall Reader	0590	125	01.22
Lock Controls	Proximity RW BROKER Control XS4	0153	126	01.07
Peripherals	CU4EB8 I/O Expansion Unit	0609	127	01.11
Lock Controls	XS4 Mini MIFARE Control with door detection	0160	128	01.73
Wall Readers	CU41xY Wall Reader (CLAY)	0592	129	01.03
Wall Readers	CU42x0 Wall Reader BROKER	0591	130	01.13
Lock Readers	MIFARE Keypad Reader XS4 SALLIS	0091	131	01.01
Lock Readers	MIFARE Reader BLE XS4	0092	132	01.11
Lock Readers	HID iClass Reader BLE XS4	0086	133	01.05
Lock Controls	XS4 Mini MIFARE Control with BLE	0161	134	01.73
Lock Controls	AELEMENT MIFARE BLE	0138	135	03.14
SILABS BGM111 BLE MODULE	SILABS BGM111 BLE MODULE		136	02.01
Lock Controls	AELEMENT MIFARE BROKER	0154	139	01.04
Lock Readers	MIFARE Reader BLE XS4 CLAY	0092	140	01.07
Lock Controls	AELEMENT FUSION MIFARE BLE	0138	141	01.09
RF3NODE	BLUEnet Node/MiniNode		142	01.07
BGM111 MODULE NODE	SILABS BGM111 BLE MODULE NODE		143	01.03
Lock Controls	AELEMENT FUSION HID iCLASS BLE	0180	145	01.02
Lock Controls	AELEMENT FUSION MIFARE DK	0154	146	01.05
Lock Controls	XS4 3G iCLASS Control with BLE	0162	150	01.02
Wall Readers	CU41xY Wall Reader BLE (CLAY)	0592	151	01.04
Wall Readers	CU42x0 Wall Reader (Mifare) with BGM	0590	152	01.12
Wall Readers	CU42x0 Wall Reader (iClass) with BGM	0582	153	01.04
Bluenet	RF3 Repeater		155	01.06
Wall Readers	CU42x0 Wall Reader (Legic) with BGM	580	157	01.06
Neo Cylinder	SALTO Neo Mifare BLE	0158	158	01.12
Encoders	NCODER - BASE (GWEN)	0951	164	01.04
Locker Locks	Mini Locker MIFARE BLE	0139	165	01.02